


(1). The input power "N/-" needs to be connected to terminal 1.

The input power "L/+" needs to be connected to terminal 3 via a switch (SW).

The drive runs when the switch (SW) is turned ON.
The spring returns when the switch (SW) is turned OFF.
When the heater is selected, the input power "L/+" needs to be connected to terminal 7.

(2). The terminal block "A B C D E F" needs to use resistive load and should not exceed 5A at 250VAC.

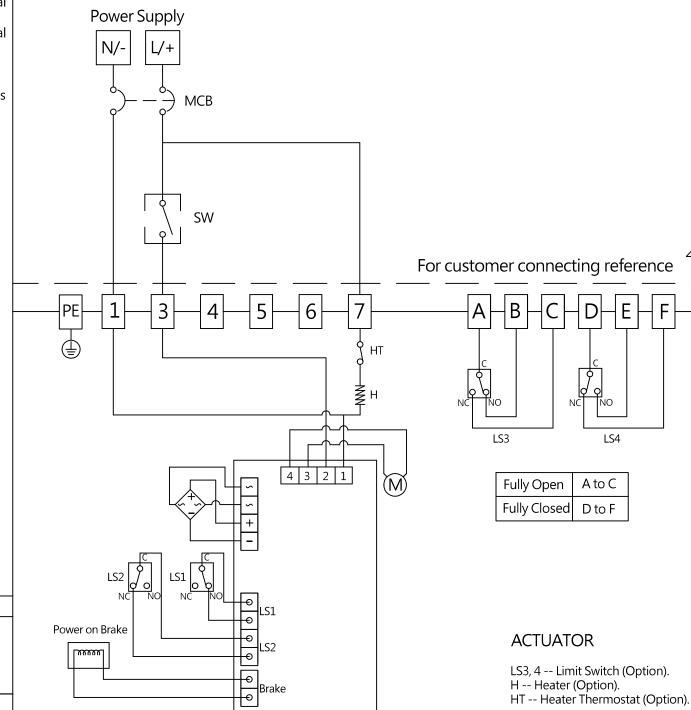

Wiring Diagram NO: 02-001-02-04-01-32-2-041

| Rev 1.1 | Signature | Date | S500 Power Supply : 24VAC/DC ON/OFF Control 2020 type 30% or 50% Duty Cycle |
|----------|-----------|------------|---|
| Designed | | | |
| Drawn | Ming Hung | 2022/01/18 | |
| Checked | Ming Hung | 2022/01/18 | |
| Approved | | | |



SUN YEH ELECTRICAL IND. CO., LTD.

TEL: +886-4-2698-5666 FAX: +886-4-2698-1188