


Note:

- (1). The input power "N" needs to be connected to terminal 1.  
The input power "L" needs to be connected to terminal 3.  
When the heater is selected, the input power "L" needs to be connected to terminal 7.
- (2). CS is the remote switch provided by the user.  
The drive runs when terminal 4 is connected to terminal 5.  
The spring returns when terminal 4 is connected to terminal 6.
- (3). The terminal block "A B C D E F" needs to use resistive load and should not exceed 5A at 250VAC.

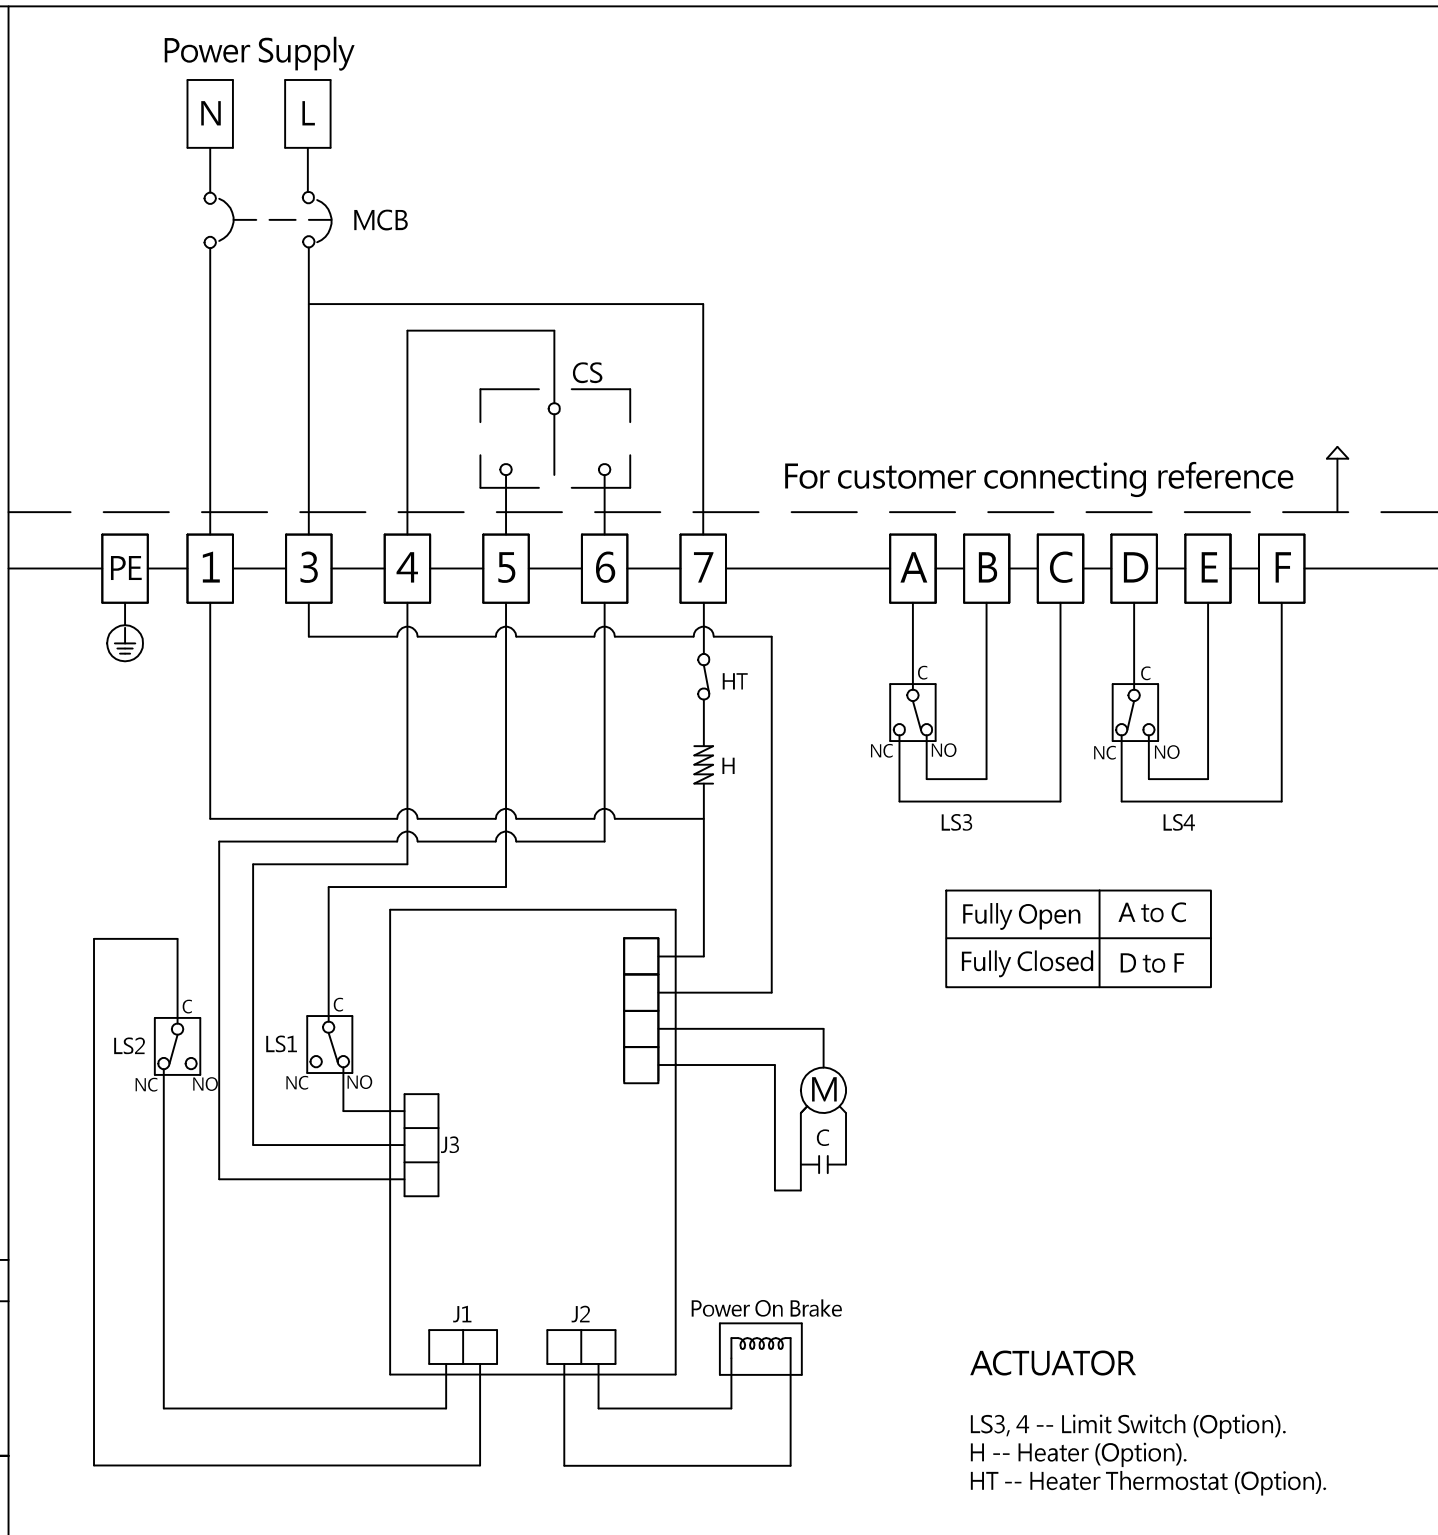

For customer connecting reference ↑

Fully Open	A to C
Fully Closed	D to F

Wiring Diagram NO: 02-006-17-02-02-32-3-041				
Rev	1.0	Signature	Date	S1300 · S2000 · S2600
Designed				Power Supply : 110~120VAC 1-Phase
Drawn	Ming Hung	2021/01/13		Floating Control
Checked	Ming Hung	2021/01/13		2020 type
Approved				30% or 50% Duty Cycle



SUN YEH ELECTRICAL IND. CO., LTD.  
TEL: +886-4-2698-5666  
FAX: +886-4-2698-1188

**ACTUATOR**

LS3, 4 -- Limit Switch (Option).  
H -- Heater (Option).  
HT -- Heater Thermostat (Option).